



DRIVING STUD FOR FORGED ROD

Driving stud is to transfer the vibrations from the tup to earth rod. It should be placed in the feather key of the rod and should be imbeded with the hammer

Cat. no.	Diameter of rod	Material
	mm	
C1080375	14.2	
C1080395	16.0	steel
C1080385	17.2	

